



SHALLOW SLOPE

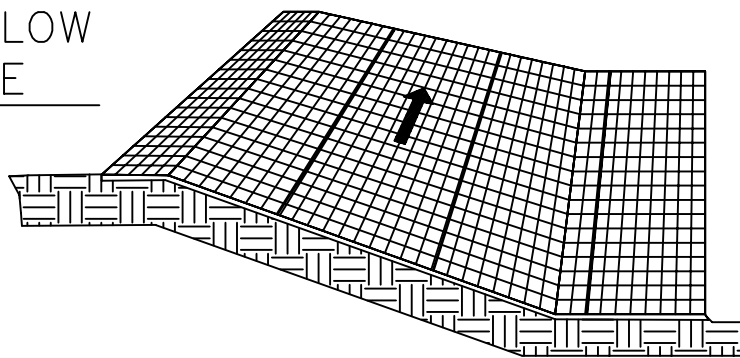


ON SHALLOW SLOPES, STRIPS OF NETTING MAY BE APPLIED ACROSS THE SLOPE

STEEP SLOPE

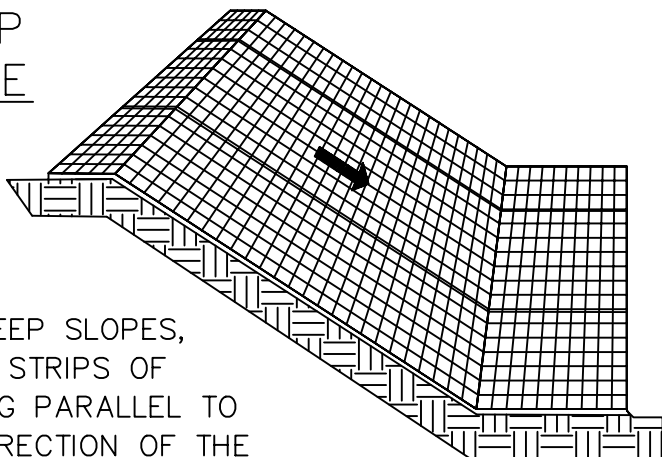


ON STEEP SLOPES, APPLY STRIPS OF NETTING PARALLEL TO THE DIRECTION OF THE FLOW AND ANCHOR SECURELY

BERM

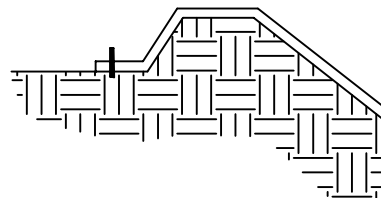


WHERE THERE IS A BERM AT THE TOP OF THE SLOPE, BRING THE NETTING OVER THE BERM AND ANCHOR IT BEHIND THE BERM

DITCH

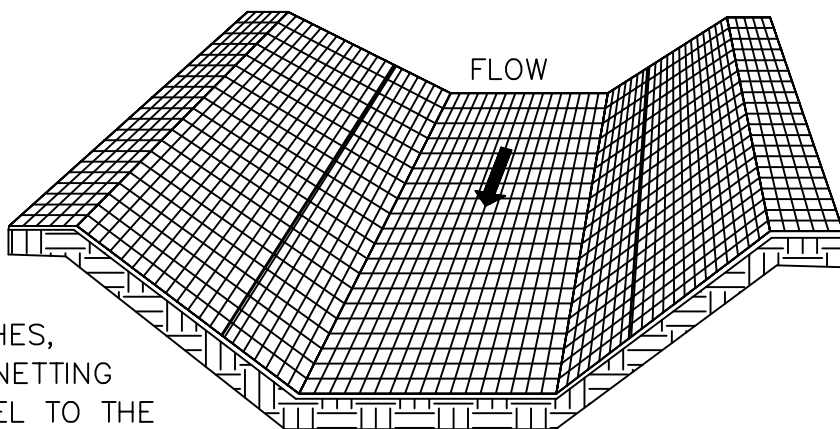

IN DITCHES, APPLY NETTING PARALLEL TO THE DIRECTION OF FLOW. USE CHECK SLOTS EVERY 15'. DO NOT JOIN STRIPS IN THE CENTER OF THE DITCH

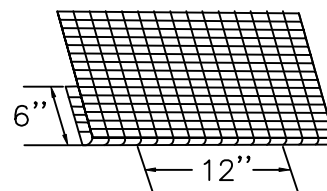

BRING THE NETTING DOWN TO A LEVEL AREA BEFORE TERMINATING THE INSTALLATION. TURN THE END UNDER 6" AND STAPLE AT 12" INTERVALS

DRAWN BY: JSH  
CHECKED BY: RJH

APPROVED BY:  
DIRECTOR OF PUBLIC WORKS

CITY OF BOULDER, COLORADO  
ORIENTATION OF  
NETTING AND MATTING

ISSUED: JULY 2, 1998  
REVISED: OCT. 17, 2000

DRAWING NO.

7.27