
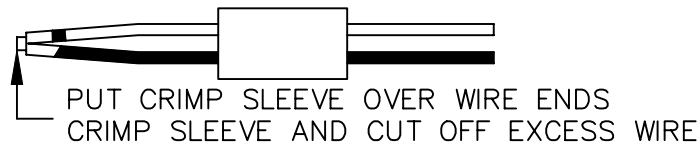



STEP 1

APPLY SEALER TO OUTSIDE OF SEALING PLUG. FILL CAVITY WITH SEALER

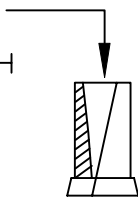


STEP 2

PULL BASE SOCKET OVER WIRE END AS FAR AS POSSIBLE

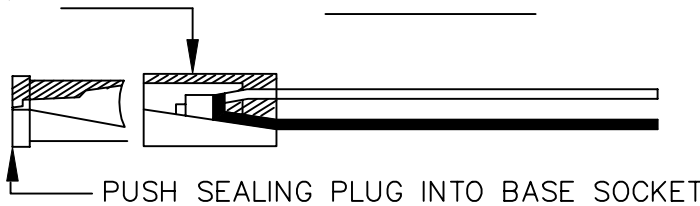

STEP 3

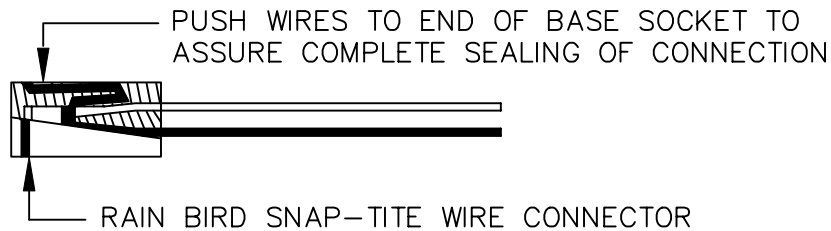

STEP 4

NOTE: FOR WIRE SIZES NO. 14, NO. 12 AND NO. 10

DRAWN BY: JSH
CHECKED BY: WGH

APPROVED BY:
DIRECTOR OF PUBLIC WORKS

CITY OF BOULDER, COLORADO
IRRIGATION SYSTEM
WIRE CONNECTION

ISSUED: JULY 2, 1998
REVISED: OCT. 17, 2000

DRAWING NO.
3.42